

Tone Ringer Character

1. Access menu
- select Settings
- select Ring type
2. Select type of call
3. Select sound or melody

Phone Lock

- To lock or unlock
- select Access
- Enter lock code
- To change lock code
- select Access
- select Change code
- Enter current code
- Enter new code
- Enter new code

Key Lock

- Manual
- select Keylock On
- Automatic
1. Access menu
- select Settings
- select Keylock
2. On (Auto)/Off (Manual)
- To use when locked
- Make your call or enter a menu

Display Language

1. Access menu
- select Settings
- select Language
2. Select language

Display light

1. Access menu
- select Settings
- select Light
2. Select On/Off/Auto

Answering Mode

Note: Only applicable when a headset is connected.

1. Access menu
- select Settings
- select Answering mode
2. Select Any key/Auto
3. Select On/Off

Key Sound

1. Access menu
- select Settings
- select Key sound
2. Select Click/Tone/Off


Symbol Explanations

- Scroll up
- select Store
- Scroll to a specific menu
- Scroll down
- 2x
- Press repeatedly the key as many times as shown
- Scroll up or down
- (0-9)
- Press one of the keys 0-9

Volume Control

- Earpiece volume
- (During a call)
- Tone ringer volume
- select Settings
- select Ring level
- select DECT
- low - - - high
- increasing step-by-step
- select Step
- off
- select
- Turn ringer off for current call
- (When ringing)

Menu Structure

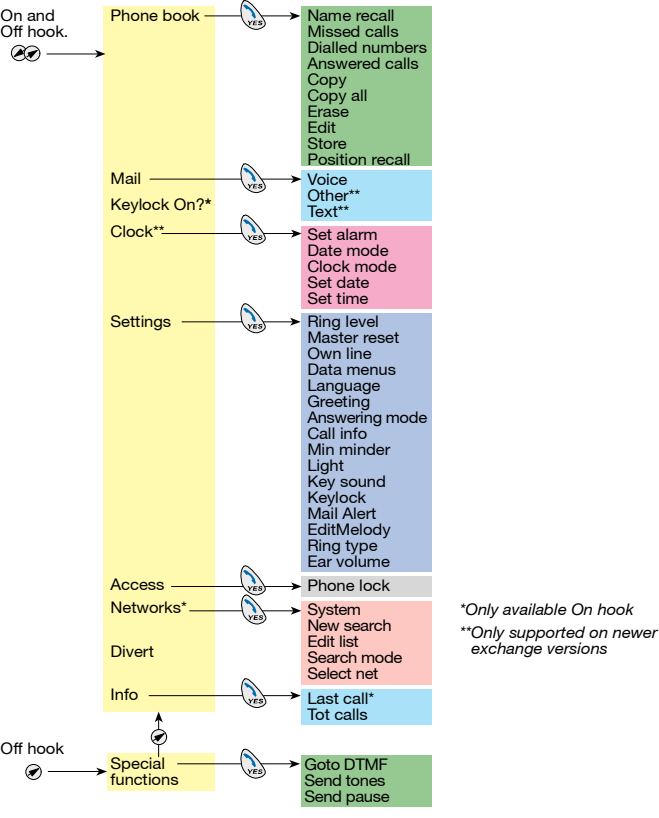

TH688

GSM/DECT Dual Mode Telephone

Quick Reference Guide

- when connected to an MD110 DECT Network



Switch On/Off

Switch on (Press until the display lights up) Check that DECT network is connected. If not, change network.

To change network select Networks select System select DECT

Switch off (Press until the display turns blank)

Free Seating\*

Log on \* 11 \* Individual auth. code \* Ext. #

Log off # 11 #

Answer Calls

Answer

Answer for another extension (Call pick-up) Call the ringing extension

Note! In France: , in Sweden:

Make Calls

Normal calls Dial number

Abbreviated number Common Dial abbreviated number

Individual (Speed dialling) (1-9)

Call by name (example: Eva) 2x 3x

Quick Call by name (example: Bob) 2 (Keep pressed for appr. 1 sec.) 2 (Press quickly)

Redial Last external number \*\* \* 0

One of last 15 numbers

Answered Calls One of last 5 callers select Phone book select Answered calls

Missed Calls One of last 5 callers select Phone book select Missed calls

Note! is shown when there are new, missed calls.

During Connected Calls

End call

Mute, activate or cancel

Dial digits 9 Dial digits Note! In Finland: 1

On Hold

Put on hold

Resume call

Resume call that was put on hold on another telephone Call the extension where the call was put on hold

Note! In France: , in Sweden:

Inquiry

Ongoing conversation Call the 3rd party

Refer back Note! In Sweden:

Return to first party

Transfer

Ongoing conversation Call the 3rd party (Press before or after answer)

Conference

Ongoing conversation Call the 3rd party 3 (Press after answer)

When Busy Tone or No Answer

Callback Note! In France, Finland and Sweden: 5

Cancel individual Callback # 37 \* Ext. #

Cancel all Callbacks # 37 #

Activate Call waiting 5 (At busy signal) Note! In France and Finland: , in Sweden: 4

Call Forwarding

Personal number\* Cancel \* 10 \* (1-5) # # 10 #

Bypass diversion \* 60 \* Ext. #

Follow-me Cancel \* 21 \* New ext. # # 21 #

Note! In U.K. \* 2 \* and # 2 # are used for Follow-me

External follow-me Cancel \* 22 # External code/No. # # 22 #

Voice Mail\*

Entering your mailbox In general

When is shown select Mail select Voice Follow recorded instructions

Absence Information\*

Activate \* 23 \* Cause \* HHMM/MMDD # #

Cancel # 23 #

Phone Book

Enter letters, digits, etc.

Press a key repeatedly until the wanted letter, digit, etc., is shown in the display.

| Key | Characters                        | Key | Characters                     |
|-----|-----------------------------------|-----|--------------------------------|
| 1   | Space - ? ! , . : ; ' " < = > ( ) | 7   | P Q R S ß 7 Π Σ                |
| 2   | A B C A Å Æ à Ç 2 Γ               | 8   | T U V Ü ù 8                    |
| 3   | D E F è É 3 Δ Φ                   | 9   | W X Y Z 9                      |
| 4   | G H I i 4                         | 0   | + & @ / % \$ ¥ § ¨ i 0 θ ε ¶ Ω |
| 5   | J K L 5 Λ                         | *   | Lower / upper case             |
| 6   | M N O Ñ Ö ø ö 6                   | #   | # x                            |

Example: SMITH

Erase a character

Add Name and Number

1. Access menu select Phone book select Store

2. Enter name (example: Eva) 2x 3 3x 8 1x 2

3. Enter number Enter number

Add Number from Telephone Memory Lists

1. Access menu select Phone book select Missed calls or Dialed Numbers or Answered calls

2. Select number select number select Store

3. Enter name (example: Eva) 2x 3 3x 8 1x 2

Edit Name, Number or Position

1. Access menu select Phone book select Edit

2. Select position or name select Position or Name

3. Enter position number, or name Enter digits or letters

4. Select item (Cursor at the end of a row)

5. Edit (Repeat until wanted pos. is found) (Removes character to the left) Enter new characters

Erase Name & Number

1. Access menu select Phone book select Erase

2. Enter position number Enter digits

3. Scroll to find name

4. Erase

\*Optional

Note! Ext. = Extension No.